
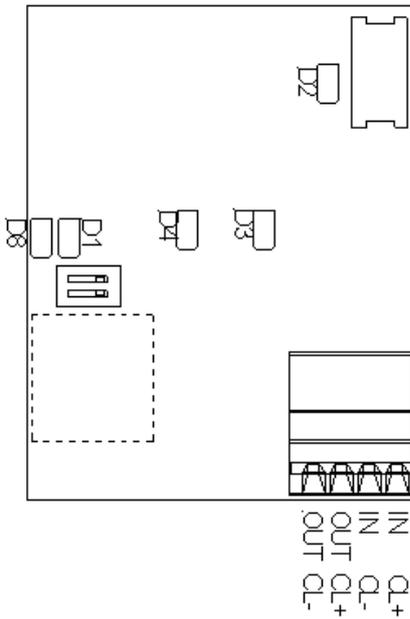


# Interface module for PST1

Partnumber: 136523  
 Name: MOD-00  
 Type: Kienzle ER3  
 Interface: 20mA Current Loop, passive  
 Datatype: 1200 Bd. 8N1

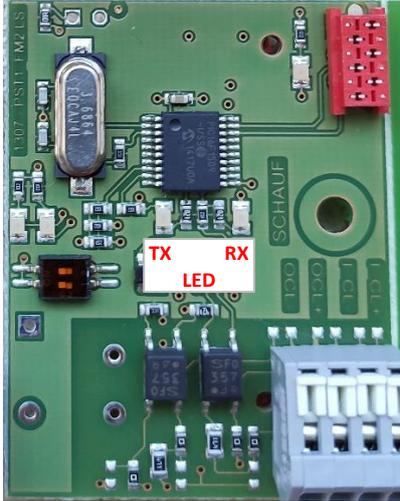

Signal LED:	Function:
D2	Power on
D3	Flashes when receiving data
D4	Flashes when transmitting data
D1 / D8	Flashing alternately when the module is ready

DIP- Switch:	Function
1: OFF	default
2: OFF	

Terminal:	Signal:
IN CL+	Input Data +
IN CL-	Input Data -
OUT CL+	Output Data +
OUT CL-	Output Data -

**Notice:** Signal LED behavior of D3 and D4 on current loop interfaces:  
 RX LED (D3) is on when nothing is connected to the input.  
 RX LED (D3) is not on, when an active current loop is connected to the input.  
 RX LED (D3) blinks, flashes when data is being received.

TX LED (D4) is on permanently when not in use.  
 TX LED (D4) dims, flickers when module is sending data or feedback.